

Barcode scanner setup instructions

JetSort® 3000, 4000 or 6000 series

Laser Specifications for Barcode Scanner Gun

- **Type:** Laser barcode scanner
- **Output wavelength:** 650 nM nominal
- **Safety class:** CDRH Class II, 1.0 mW max.

CAUTION Avoid direct eye contact with laser in handheld barcode gun.

Enter setup mode

1. Press red key for approximately 5 seconds to enter JetSort® setup mode.
2. Go to **Data Entry Selections > Labels**.
 - a. Turn desired Label to **AUTO**.
 - b. **Exit** when complete.
3. In setup mode, go to **Port Setup**.
 - a. Set JetSort port 2 to **BCR** (Bar Code Reader). Set Baud and parity to **4800/8/none**.
4. From the Setup Main Menu, select **PERIPHERAL FORMAT > BAR CODE READER TYPE. > SCANR**.

Setup barcode reader

BCR		
Type:	WAND	SCANR
Auto		
Enter	OFF	ON
Auto		
Setup	OFF	ON

5. Select Auto Enter **On** or **Off**.

With Auto Enter **Off**, the operator must press the **Enter** key to accept what is scanned into a JetSort label.

6. Select Auto Setup **Off** for this scanner.
7. Exit **Setup** mode.

The scanner is ready to read barcode labels in approximately 3 to 4 seconds. JetSort is ready to process coin.



After scanner has been initialized, it is not necessary to follow these steps on subsequent JetSort power-ups.



Barcode scanner setup instructions for JetSort 1000 series are included in the operating instructions, part number 022-7240-00.